MONOPRICE®

High Quality TV STAND

with Built-In Sound Console

PID: 11554/11555

USER'S MANUAL

Contents

Important 1

Notice 1
Safety 2

Product Information 3

Specifications 3

Your Home Audio 4

Introduction 4
Package Contents 4
Overveiw of the Main Unit 4
Overview of the Remote Control 6

Getting Started 7

Preparing the Remote Control 7
Connecting Power 7
Powering On 7

Playback 8

Playback from a Bluetooth® Device 8
Playback from the OPT Input 8
Playback from the RCA Inputs 8
Playback from the AUX Input 8
Playback from the USB Input 8
Adjusting the Volume Level 8

Troubleshooting 10

Bluetooth® Troubleshooting 10

Notice

Know these signs

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN THE COVER

CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

EU Regulatory Conformance
Hereby, Monoprice Inc. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

This product’s packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations.
Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.
This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.

Safety

Important Safety Instructions

■Read these instructions.

■Keep these instructions.

■Heed all warnings.

■Follow all instructions.

■Do not use this apparatus near water.

■Clean only with a dry cloth.

■Do not block any ventilation openings.

■Do not install near any heat sources, such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.

■Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the device.

■Unplug this apparatus during lightning storms or when unused for long periods of time.

■All repairs should be performed by qualified service personnel only.

■Battery usage CAUTION – To prevent battery leakage, which may result in bodily injury, property damage, or damage to the unit, the batteries (battery pack or batteries installed) should not be exposed to excessive heat, such as direct sunlight, fire, etc.

■Do not expose this device to dripping or splashing water or other liquids.

■Do not place any sources of danger on the device (e.g. liquid filled objects, lighted candles, etc.).

■Turn off the power switch before unplugging the device from the power outlet.

Hearing Safety

■Listen at a moderate volume level.

■Set your initial volume level to a low setting.

■Be sure to use your equipment reasonably and take appropriate breaks.

Never remove the casing of this device.
Do not place any object under the subwoofer.
Keep this device away from direct sunlight, naked flames, or heat.
Make sure that you always have easy access to the power cord.
Unplug the device from the line power when necessary.

Product Information

Specifications

Amplifier

Rated Output Power	64W RMS
Frequency Response	50Hz-20kHz, ±3dB
Signal to Noise Ratio	⩾80dB

Speakers

Speaker Impedance	2×(8+4 ohms)+8 ohms
Speaker Drivers	1.5”Tweeter+3”Full range+6.5”Subwoofer
Output Power	2×10W+2×15W+40W RMS

General Information

AC Power	100-240VAC, 50/60Hz
Operating Power Consumption	90W
ECO Standby Power Consumption	⩽0.5W
USB	USB 2.0

Bluetooth®

Frequency Band	2.402-2.480 GHz
Range (free space)	26 feet (8m)
Standard	Bluetooth® 4.0

Your Home Audio

Introduction

Enjoy enhanced audio reproduction from TV, DVD, flash disc, or a mobile device with Bluetooth!

Package Contents

Main unit, Remote control, AC power cord, 3.5mm audio cable, RCA cable, User's Manual.

Overview of the Main Unit

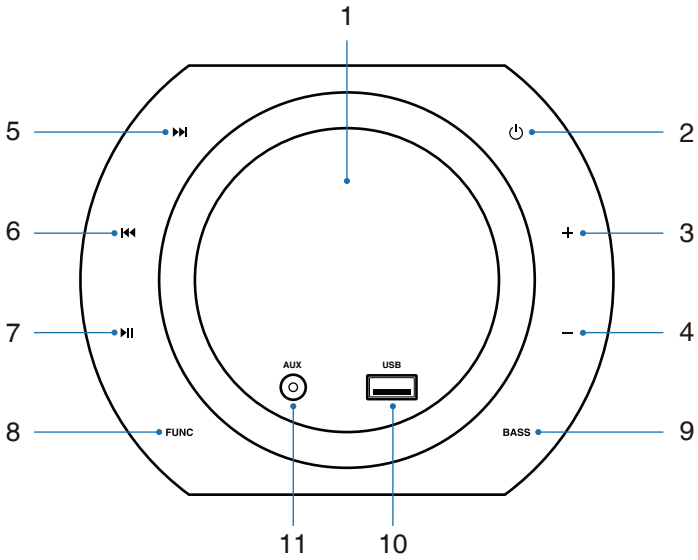

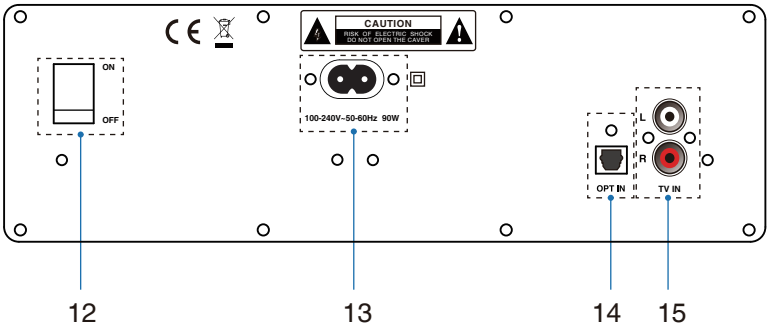

1	Screen	
2	⏻	Standby
3	+	Increases the volume
4	–	Decreases the volume
5	⏭	Next track
6	⏮	Previous track
7	⏯	Play / Pause
8	FUNC	Function selection
9	BASS	Adjust subwoofer volume
10	USB	USB port
11	AUX	AUX IN jack
12	ON / OFF	Turn the unit on/off
13	100-240VAC, 50/60Hz, 90W	AC Power Cord input jack
14	OPT IN	Optical input
15	TV IN	Stereo RCA inputs

Overview of the Remote Control

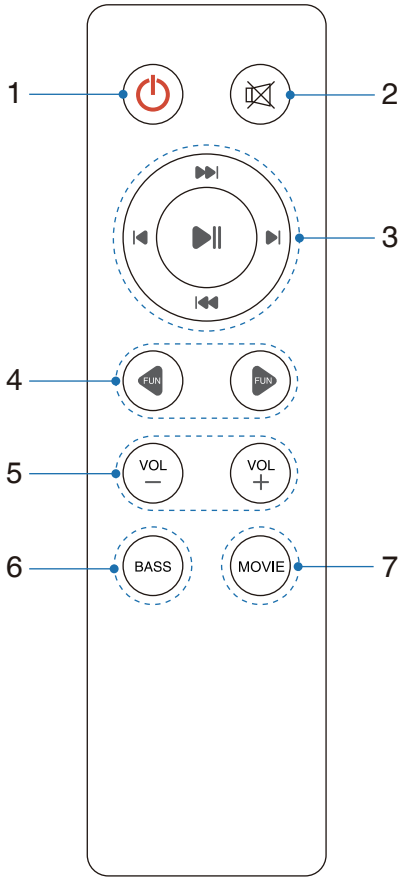

1		Standby / On
2		Mute volume
3	⏮ / ⏭	Previous/Next track
	⏮ / ⏭	Fast Reverse/Fast Forward - depends on connection type
	⏯	Start or pause playback
4	FUN / FUN	Function selection
5	VOL +/-	Adjust volume up/down
6	BASS	Adjust subwoofer volume
7	MOVIE	Movie sound

Getting Started

Preparing the Remote Control

!!

Risk of explosion!
Keep the batteries away from heat, direct sunlight, or fire.
Never discard batteries into fire.

For first-time use:
Remove the protective tab to activate the remote control battery.

To replace the remote control battery:
①Open the battery compartment.
②Insert one CR2025 battery with correct polarity (+/-) as indicated.
③Close the battery compartment. 7.1

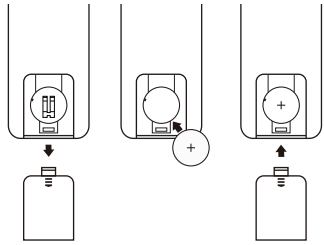

7.1

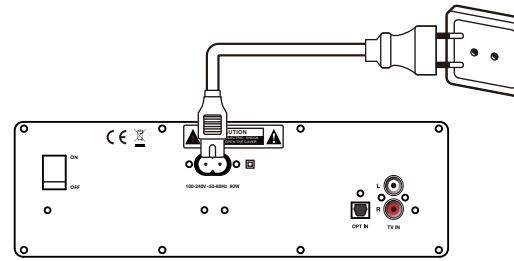

7.2

Connecting Power

!!

Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the unit.
Risk of electric shock! Never pull the cord.
Before connecting the power, make sure the power switch was turned off.

Connect one end of the AC power cord to the device and connect the other end of the AC power cord to the wall outlet. 7.2

Powering On

①Press the power switch on the back of the unit,
②Press ⏻ on the main screen.



Playback

Playback from a Bluetooth® Device

Press the **FUNC** button on the display panel or press the **BT** button on the remote control to enter Bluetooth® mode. When the display panel shows BT and the Bluetooth® indicator flashes, turn on the Bluetooth® function of your device, search for nearby devices, and select the **MP-Console** entry. If prompted for a passcode, enter 0000 (four zeros). After pairing is complete, you may need to manually connect to the Sound Console. 8.1

NOTE:

The console can remember the last Bluetooth® device that it received an audio signal from, so you don't have to pair it again. Note that if you pair a device without following up with audio playback, the console will not remember that device.

Playback from the OPT Input

Press the **FUNC** button on the display panel or press the **OPT** button on the remote control to enter optical mode. The display panel will show OPT. Use an optical (Toslink) cable to connect the output of your audio source device to the console and set the output of the device to PCM mode. 8.3

Playback from the RCA Inputs

Press the **FUNC** button on the display panel or press the **TV** button on the remote control to enter TV mode. The display panel will show TV. Use a stereo RCA cable to connect the audio outputs from your TV (or other audio source device) to the console. 8.3

Playback from the AUX Input

Press the **FUNC** button on the display panel or press the **AUX** button on the remote control to enter AUX mode. The display panel will show AUX. Use a 3.5mm stereo audio cable to connect your audio source device to the console. 8.2

Playback from the USB Input

Press the **FUNC** button on the display panel or the **USB** button on the remote control to enter USB mode. The display panel will show USB. Plug your USB drive into the USB port and playback will begin automatically. 8.2

Adjusting the Volume Level

During playback, press **Vol +/-** to increase/decrease the volume level.
During playback, press **BASS** and then press **Vol +/-** to increase/decrease the subwoofer volume level.
During playback, press 🔇 to mute/unmute sound.

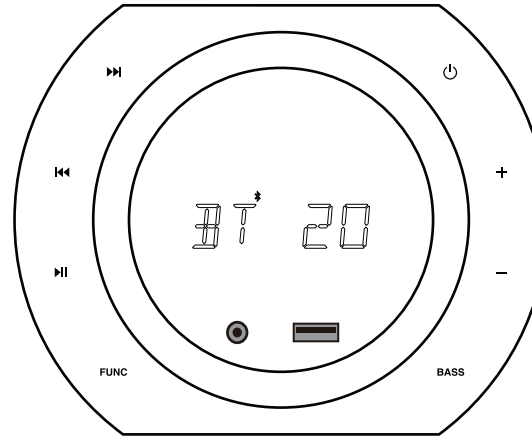

8.1

8.2

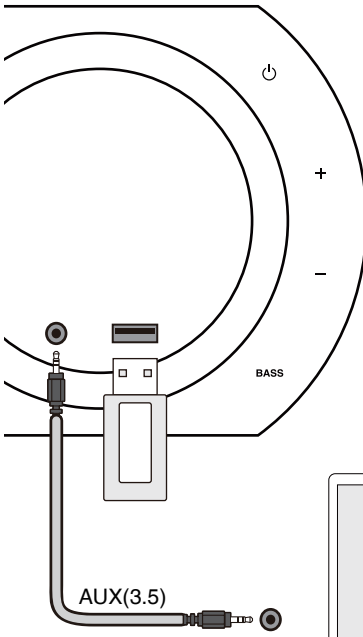

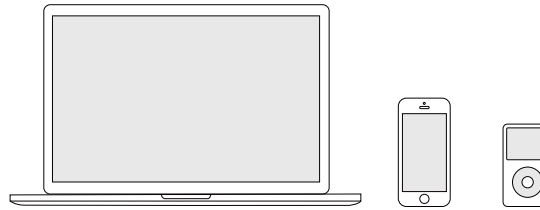

8.3

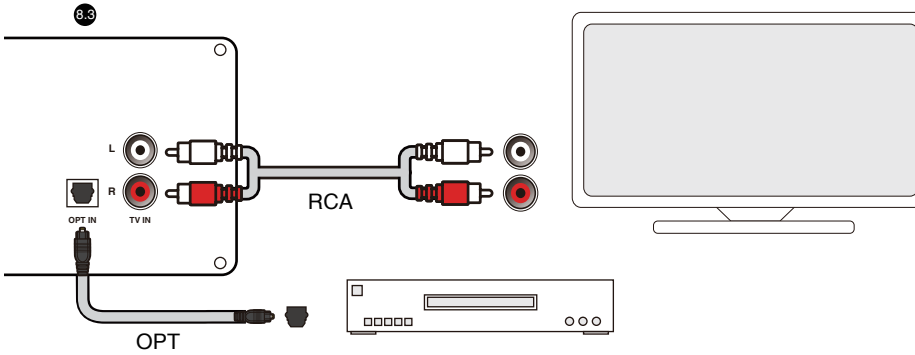

Troubleshooting

To keep the warranty valid, never try to repair the product yourself.

Please refer to the following solutions for common problems.

No Power

Ensure that the AC power plug of the unit is connected properly.

Ensure that there is power at the AC outlet.

No Sound

Adjust the volume.

No Sound from USB Playback

The console only supports MP3, WMA, and WAV files.

Ensure that the capacity of the USB drive is 32GB or less.

No Response from the Unit

Disconnect and reconnect the AC power plug, then turn on the unit again.

Bluetooth Troubleshooting

Cannot Connect with the System

The system has already connected with another Bluetooth-enabled device.

Press and hold ▶|| to disconnect that device, then perform the pairing procedure again.

Intermittent Connection

Move the device closer to the console or remove any obstacles between the device and the console.

www.monoprice.com

Copyright © 2014 Monoprice, Inc. All rights reserved.